







Gen1 Angled Shims Mounting Information.

M5 Systems

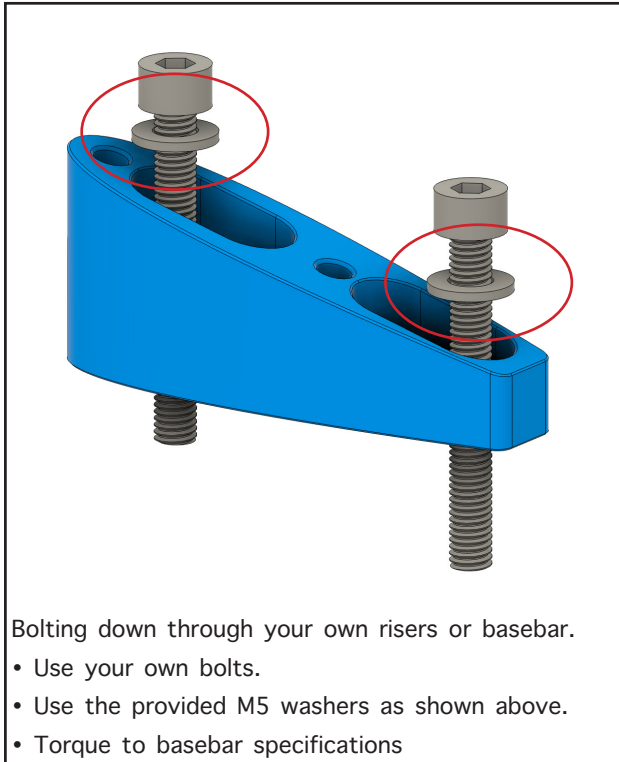

M6 Systems

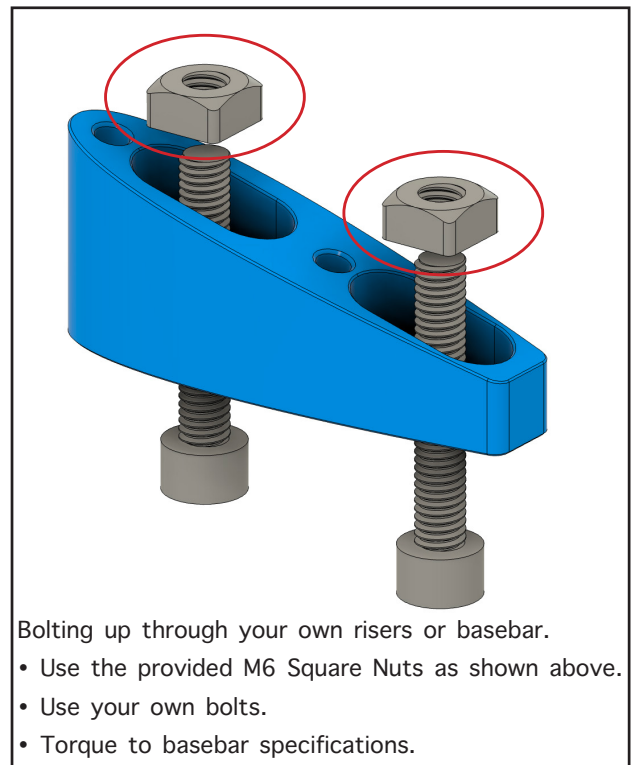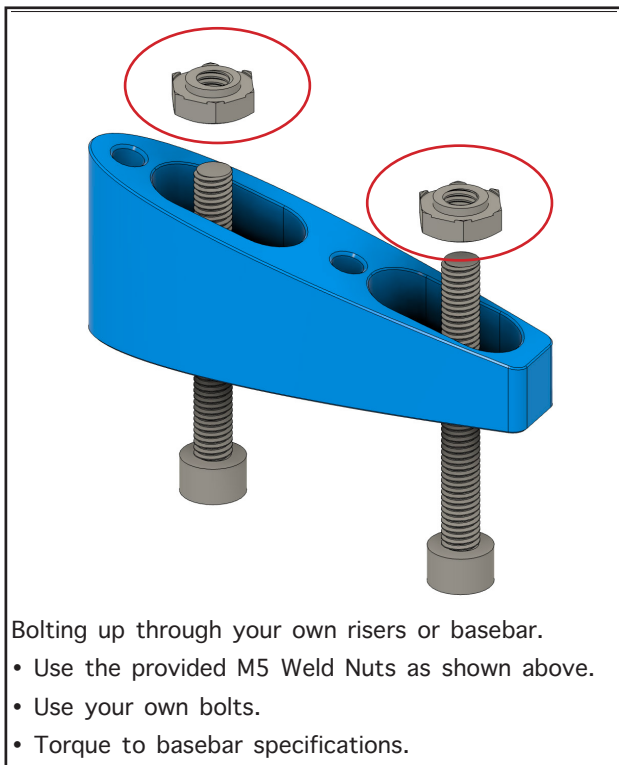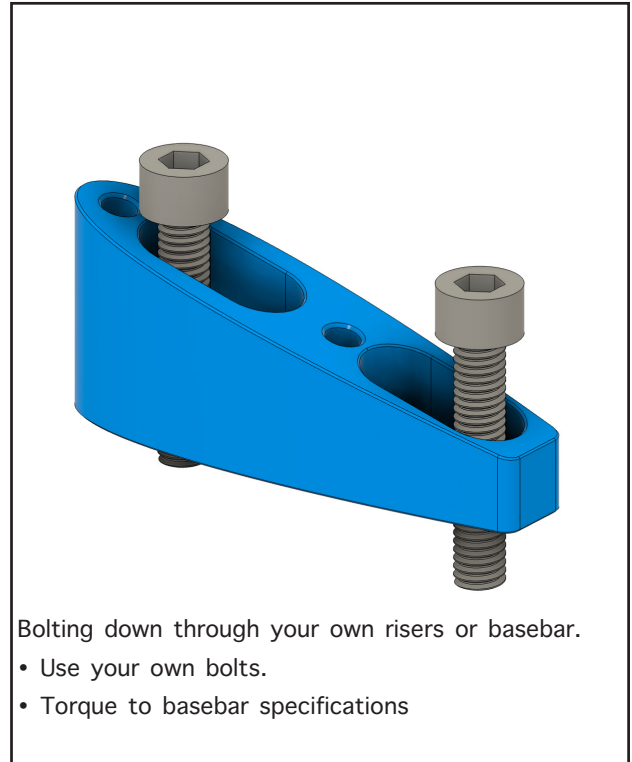





Mounting a Gen1 Pole Clamp and Armrests

For Drag2Zero .44 Armrests.

Use the provided 35mm flanged button head bolts as seen below. Torque to 5Nm.

Ensure at least 8mm of engagement with our angled shims. (8 full bolt turns)

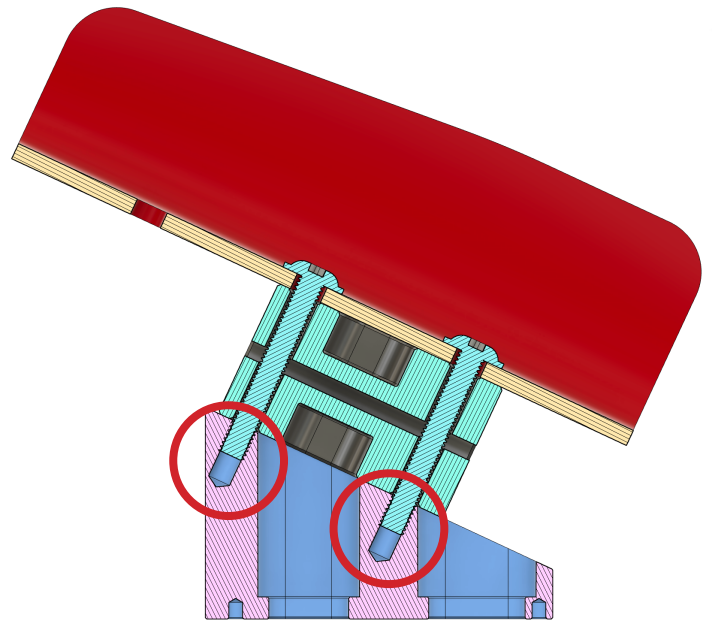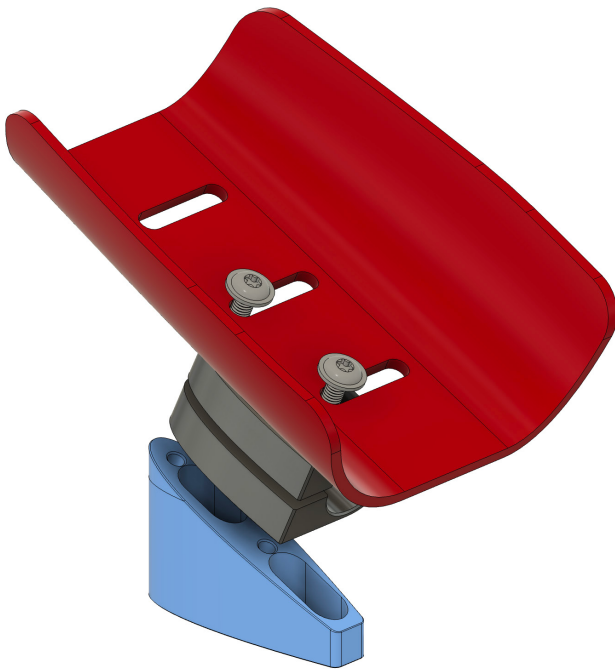

For Non Drag2Zero Armrests.

If your armrests are less than 3mm thick, use the provided washers to enable the correct thread engagement of 8mm with our angled shims. Place washers between bolt heads and armrests

If your armrests are more than 3mm thick, you will need to source longer bolts to have the correct (8mm) thread engagement with our angled shims.

