




## Universal Dual BTA

Parts List - Parts vary depending on kit selected when ordered.

- DUAL BTA Aged Shims
- DUAL BTA Add-On
- DUAL BTA Height Adjustment
- DUAL BTA Universal Carbon Plate

### Tools required

- T25 Torx key
- M3 Allen key

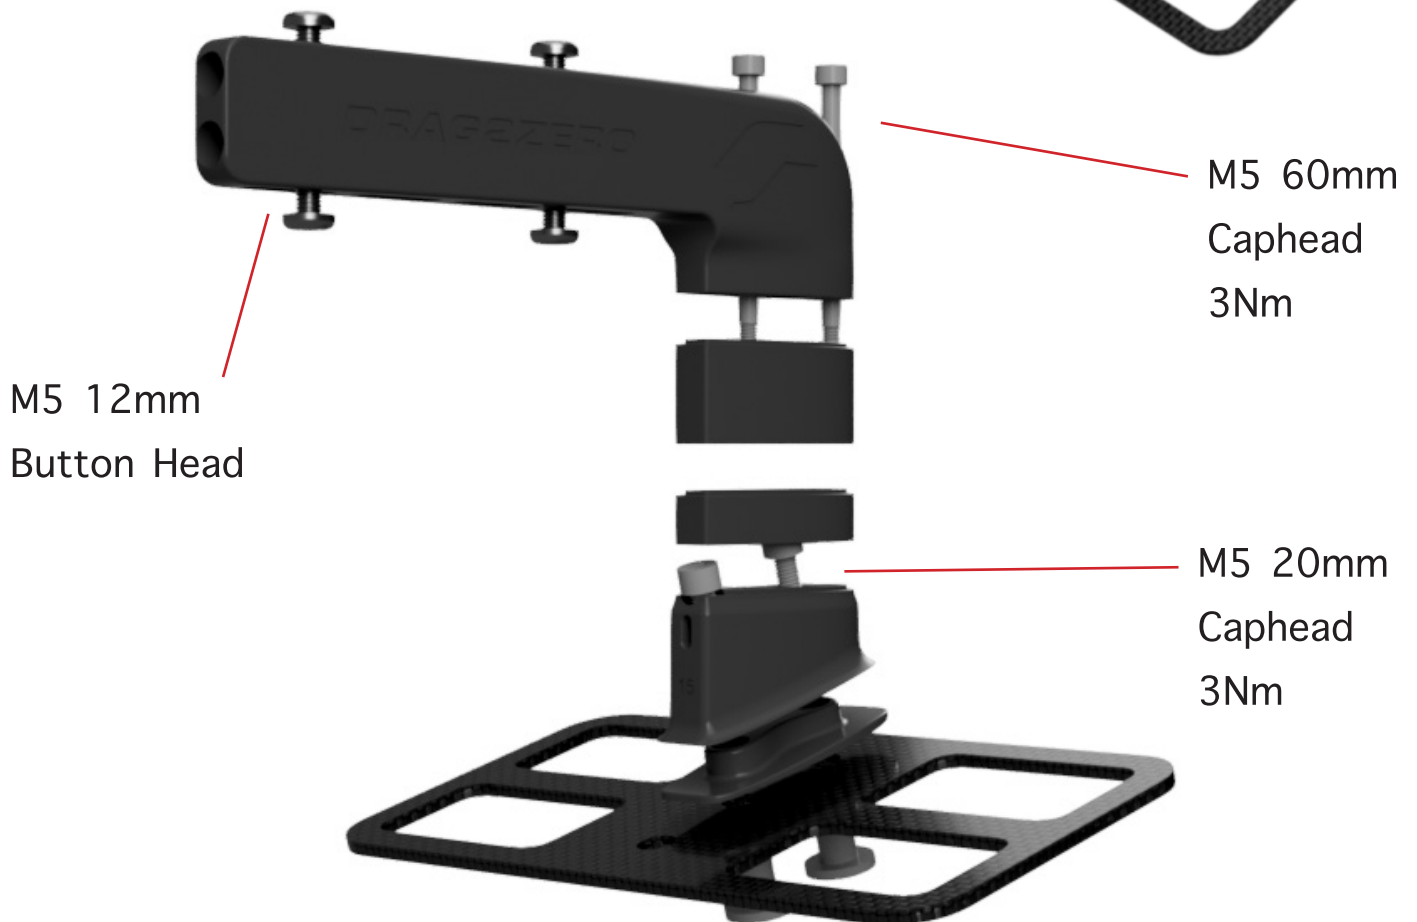

# DRAG2ZERO



## Mounting a Universal BTA System

Step 1 - Remove Armrests to reveal armrest mounting surface (in this case Pole Clamps)



Step 2 - Place Universal BTA system on armrests mounting surface as seen below.



Step 3 - Mount Armrests back onto pole system sandwiching Universal DUAL BTA Carbon plate between. **You may need to source longer bolts.** The Universal BTA Plate is 3MM thick.



Step 4 - Torque armrests to your bikes specific specifications. In this case 3Nm for Gen2 Pole Clamps



**DRAG2ZERO**

